



IMPORTANT

To update the firmware of the EasyGrid Touch Screen; you must have the administrative right on you PC.

1. On your local drive


Download all the Amulet files from the FTP site :

ext_fiso.client.support/Software/Amulet



<http://ftp.roctest-group.com/file/>

Username : fiso.support

Password : support.fiso

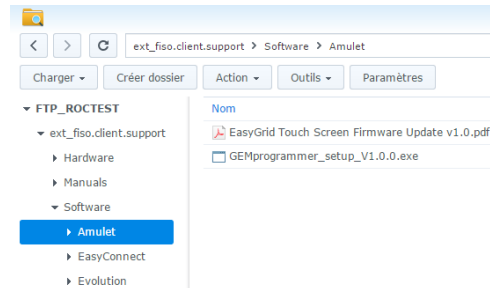

2. Launch the installation of "GEMprogrammer_setup_V1.0.0.exe"

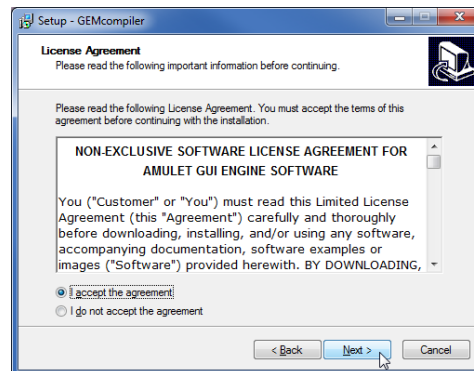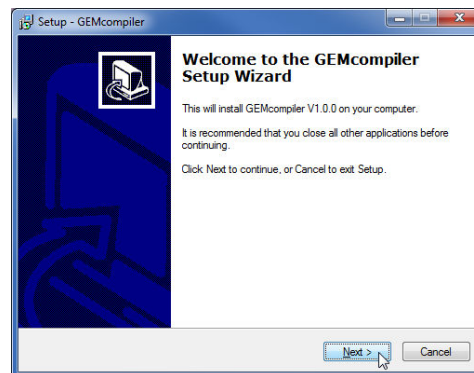





Setup - GEMcompiler
Select Destination Location
Where should GEMcompiler be installed?
Setup will install GEMcompiler into the following folder.
To continue, click Next. If you would like to select a different folder, click Browse.
C:\Program Files (x86)\AmuletTechnologies
Browse...
At least 86.3 MB of free disk space is required.
< Back Next > Cancel


Setup - GEMcompiler
Select Start Menu Folder
Where should Setup place the program's shortcuts?
Setup will create the program's shortcuts in the following Start Menu folder.
To continue, click Next. If you would like to select a different folder, click Browse.
AmuletTechnologies
Browse...
< Back Next > Cancel


Setup - GEMcompiler
Select Additional Tasks
Which additional tasks should be performed?
Select the additional tasks you would like Setup to perform while installing GEMcompiler, then click Next.
 Create a desktop icon for GEMprogrammer
< Back Next > Cancel

Setup - GEMcompiler
Ready to Install
Setup is now ready to begin installing GEMcompiler on your computer.
Click Install to continue with the installation, or click Back if you want to review or change any settings.
Destination location:
C:\Program Files (x86)\AmuletTechnologies
Start Menu folder:
AmuletTechnologies
Additional tasks:
Create a desktop icon for GEMprogrammer
< Back Install Cancel



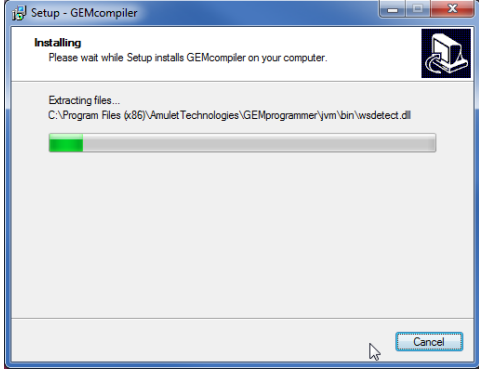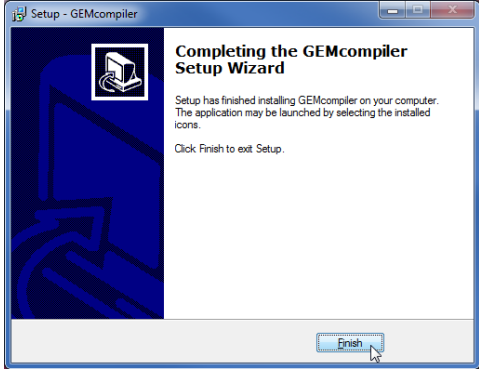


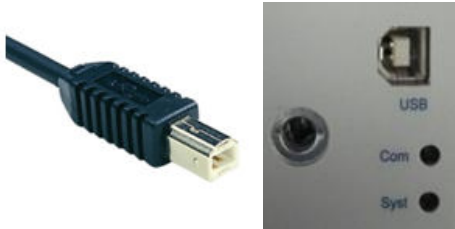	 
--	--
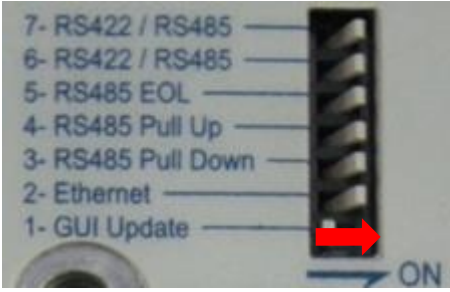
<p>3. Connect your PC to the EasyGrid with the USB cable</p>	
--	--


<p>4. Set the « GUI Update » dip switch to ON</p>	
---	--

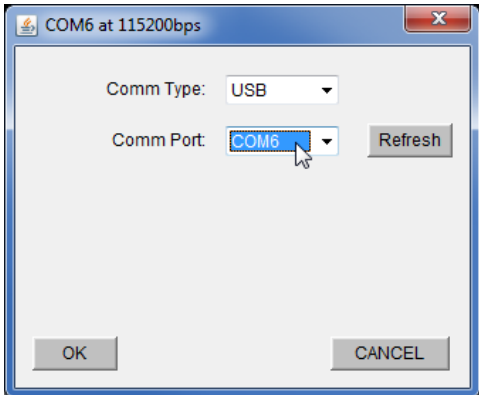


<p>5. Start the EasyGrid</p>	
<p>6. Start GEMprogrammer software</p>	 <p>GEMprogrammer.exe</p>
<p>7. Select the proper « Comm Port » then Click Ok</p>	




8. In the File menu, select « Open »

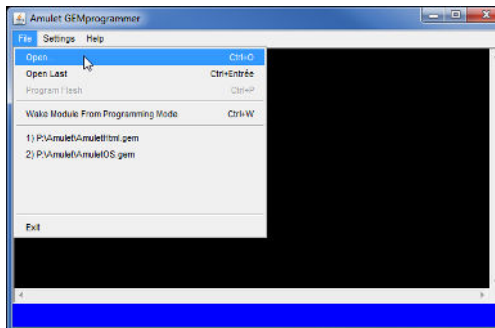

9. From the upgrade folder we have sent by E-Mail, select the OS file « AmuletOS.gem » and Click « Open »

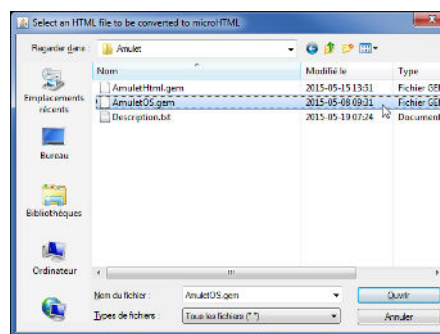

10. Click on the « Program Flash » button

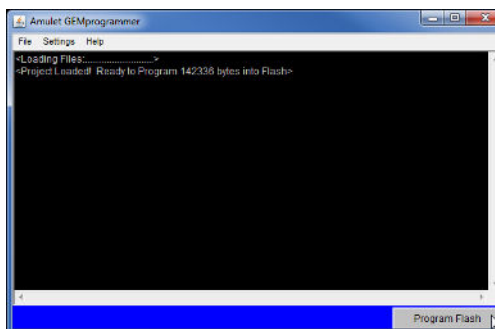




11. Programming Flash is in process...

On the display you will see :


**Please wait while
Programming flash...**

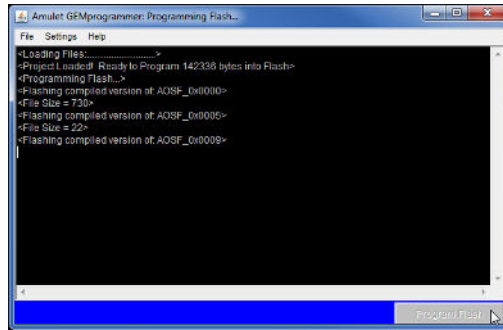

12. When completed, you will get a message showing that the Flash is :

“Successfully Flashed”

Note : If this message appears :
“ERROR: Serial Port, invalid data [67]”
The procedure has succeeded as long as
“Successfully Flashed” message displays.

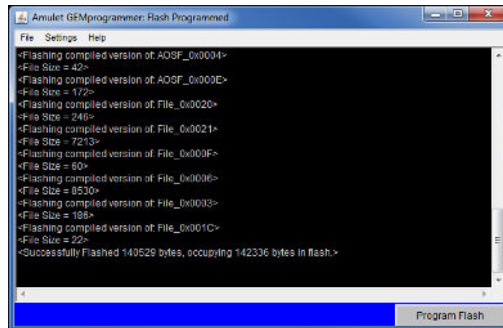


13. Now, on the display you need to do the touch screen calibration. Click on the 3 “Touch Center” target point to do the calibration.







14. In the File menu, select « Open »

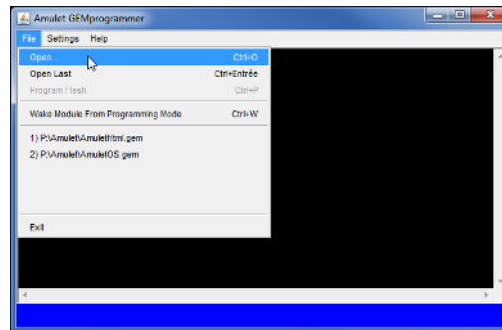

15. From the upgrade folder we have sent by E-Mail, select the OS file « AmuletHtml.gem » and Click « Open »

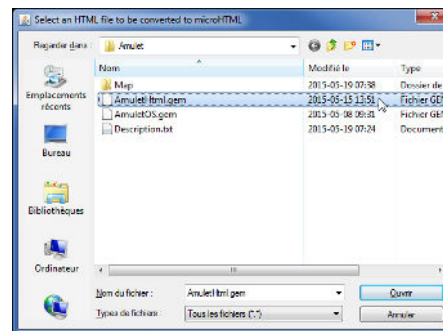

16. Click on the « Program Flash » button

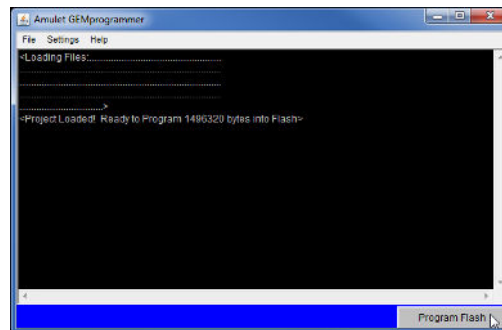



<p>17. Programming Flash is in process...</p> <p>On the display you will see :</p> <p style="text-align: center;">Please wait while Programming flash...</p> <p style="text-align: center;">This procedure could take up to 5 minutes</p>	
<p>18. When completed, you will get a message showing that the Flash is :</p> <p style="text-align: center;">“Successfully Flashed”</p> <p>Note : If this message appears : “ERROR: Serial Port, invalid data [67]” The procedure has succeeded as long as “Successfully Flashed” message displays.</p>	
<p>19. Put the « GUI Update » dip switch OFF</p>	
<p>20. Reboot the EasyGrid</p>	
<p>21. The installation is completed. You can now test all the new options.</p>	